


Rebar Hangers

www.Vitale-Robinson.com

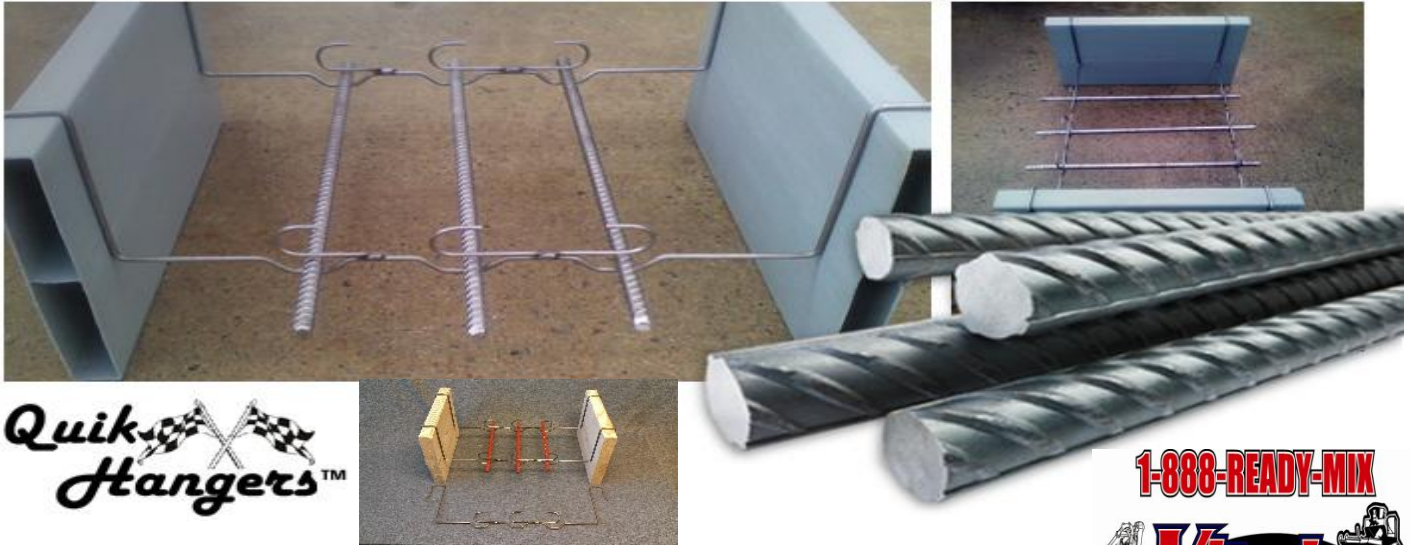


The Vitale & Robinson Companies are proud to offer our patented Quik Hangers® - Rebar Placement System. Quik Hangers® offer contractors a multifaceted approach for maintaining consistent forming width and precise rebar placement ensuring labor savings and satisfied code enforcement officials.




The Quik Hangers® rebar wells speed production without the need to tie or chair rebar. Rebar wells securely hold #3, #4, #5, or #6 reinforcement bars in place for consistent coverage and spacing from the sides and top of the concrete footing forms.

Offered in multiple sizes all Quik Hangers® systems are compatible with conventional 2"x 8" & 2"x 10" lumber or 10" Form-A-Drain™ to create footing widths from 18" to 24". Quik Hangers® are conveniently available at all Vitale-Robinson locations or may be ordered online for shipment world-wide.


Holds Rebar in Footing

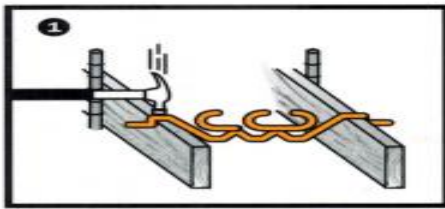

1 Install Quik Hangers approximately 4'-5' apart over wood form structure or Form-A-Drain.

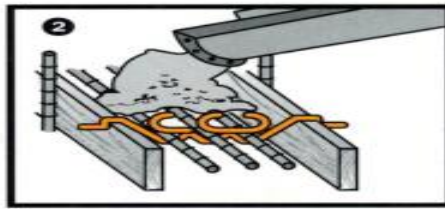

2 Rest rebar in the Quik Hanger wells and pour concrete in the wood forms or Form-A-Drain. Trowl as necessary.

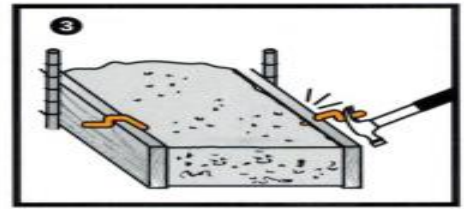

3 When concrete has cured snap off the protruding Quik Hanger ends and remove wood forms.

For Form-A-Drain simply leave in place.

PRODUCT	Footing Width (Inches)	Footing Thickness (Inches)	Vertical Position of Rebar Distance from Top of Form Board to Centerline of Rebar	Number of Bar Placement Positions	Horizontal Position		
					Left	Center	Right
					Measured From Inside Edge of Form Boards to Centerline of Rebar		
QH-1808	18"	8"	5.00"	2	5.00"	N/A	5.00"
QH-2008	20"	8"	5.00"	3	5.00"	10.00"	5.00"
QH-2010	20"	10"	6.50"	3	5.50"	10.00"	5.50"
QH-2410	24"	10"	6.50"	3	4.75"	12"	4.75"

Vitale-Robinson Concrete

3486 Franklin Street – Auburn, New York 13021

(315) 253-6666 Office / (315) 252-7595 Fax